

## 2000 Mile Service

Item	Inspect	Lubricate	Replace	Clean
Clutch Alignment/ Offset	I			
Drive Belt	I			
Primary and Secondary Clutch	I			
Drive Belt Tension	I			
Engine Mounts	I			
Engine Torque Link	I			
Engine Mount Screws: Re-torque engine mount screws every 1,000 miles	I			
Recoil Handle/ Rope/ Function	I			
Cylinder Head Bolts	I			
Cylinder Base Nuts	I			
Ignition Timing	I			
Exhaust System Retaining Springs	I			
VES Valves/ Solenoid/ Hoses	I			
Cooling System: Hoses, Coolant Level, Heat Exchangers	I			
Oil Filter	I			
Brake Hose Condition/Routing	I			
Brake Fluid Level/Leaks/Fluid Condition	I			
Brake Pads/ Brake Disc	I			
Parking Brake	I			
Idle RPM	I			
Oil Hoses	I			
Air Box	I			
Ski Toe Alignment	I			
Rear Chain Case Fasteners: Re-torque three lower fasteners every 1,000 miles.	I			
Suspension Mounting Bolts	I			
Steering Fasteners, Linkage, Handlebars	I			
Ski Fasteners	I			
Drive Chain Tension	I			
Chaincase / Gearcase Oil	I			
Track Alignment/Track Tension	I			
Rail Slide (Hyfax) Condition	I			
Bogie wheel condition/ Fastener Bolts	I			
Throttle Lever/Throttle Cable		L		
Driveshaft/ Jackshaft Bearings		L		
Drive Belt			R	
Spark Plugs			R	
Brake Fluid			R	
Fuel Filter			R	
Chaincase/ Gearcase Oil			R	
Primary and Secondary Clutch				C
VES Valves/ Solenoid/ Hoses				C
Hood, Seat, Chassis, Engine Compartment				C